



TERMIGNONI S.p.A.

Via della Rampina, 1
15077 Predosa – Italy
www.termignoni.it

Tel. 0039.0131.71666
Fax 0039.0131.71696
info@termignoni.it

ASSEMBLY NOTE pag. 1/3

Y090

Yamaha R1 1000 2009

2 SIL

A



B



C



D



E




F




G



H

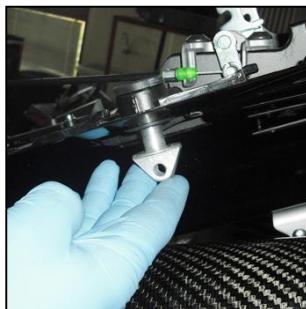

I

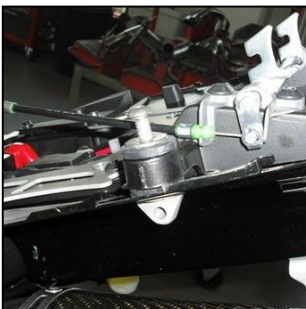

J



MOUNTING THE TERMIGNONI SILENCERS

- Assemble the silencers with their respective final bodies (Fig. A - D) fix them with the springs in the pack (Fig. B - E); position the 2 metal bands (in the pack) without tightening the screws (Fig. C - F); the right hand final body is the shortest of the 2;

- Mount the left-hand silencer to the original collector (Fig. G) taking care not to pass the painted sign on the collector;

- Insert the spacer TY125 (Fig. H) and fix to the tail of the bike using the screw M8x16 and the washer 8x24 in the pack (Fig. I);

- Mount the silencer ring holders and their rubbers together Fig. J;


- Position the silencer ring holder on the silencer making sure that it is positioned as in Fig. K, use the screw M8x20 and washer 8x16 to fix to the spacer (Fig. L);

ONLY TIGHTEN ALL SCREWS AFTER THE KIT HAS BEEN COMPLETELY MOUNTED

K



L

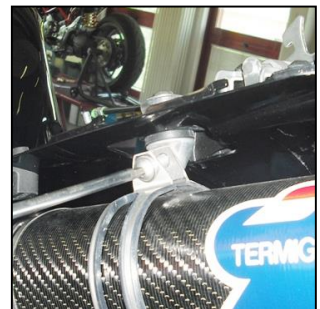



TERMIGNONI S.p.A.

Via della Rampina, 1
15077 Predosa – Italy
www.termignoni.it

Tel. 0039.0131.71666
Fax 0039.0131.71696
info@termignoni.it

ASSEMBLY NOTE pag. 2/3

Y090


Yamaha R1 1000 2009

2 SIL

M




N

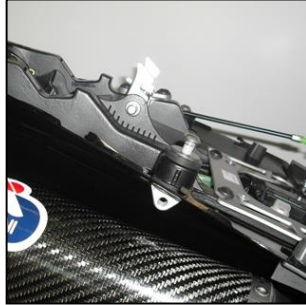

MOUNTING THE TERMIGNONI SILENCERS

- Mount the right-hand silencer to the original collector (Fig. M) taking care not to pass the painted sign on the collector;
- Insert the spacer TY125 and fix to the tail of the bike using the screw M8x20 and the washer 8x24 (in the pack) (Fig. N);
- Position the silencer ring holder on the silencer making sure that it is positioned correctly as it was for the left hand side, using the screw M8x20 and a washer 8x16 to fix to the spacer (Fig. O);
- Mount the respective clips (in the pack) to the respective final bodies as seen in Fig. P;
- The biggest carbon heat shield must be fixed to the right hand final body (Fig. Q);
- As seen in Fig. R – S using a screw M5x12, a spacer TD079 and an amid washer (in the pack) to fix the right hand heat shield to the Termignoni final body (Fig. T);
- Using a screw M5x12, a spacer TD079 and an amid washer to fix the heat shield TY129 to the left hand final body (Fig. U – V);
- Position the silencers correctly as seen in Fig. X;
- Tighten all screws, starting from the ones of the metal band and finishing with the ones of the final bodies (Fig. Y).

O

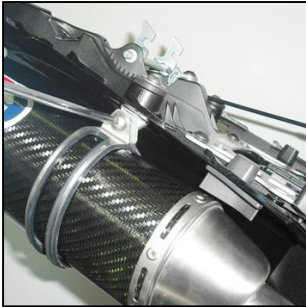

P



Q



R



S



T



U



V



ONLY TIGHTEN ALL SCREWS AFTER THE KIT HAS BEEN COMPLETELY MOUNTED

X



Y





TERMIGNONI S.p.A.

Via della Rampina, 1
15077 Predosa – Italy
www.termignoni.it

Tel. 0039.0131.71666
Fax 0039.0131.71696
info@termignoni.it

PACKING LIST *Pag.3/3*

Y090	Yamaha R1 1000 2009	2 SIL
-------------	----------------------------	--------------

- N° 1 RIGHT SILENCER **Y090** ova "B" L. 300 cap **TER282**
- N° 1 LEFT SILENCER **Y090** ova "B" L. 300 cap **TER282**
- N° 1 RIGHT HAND FINAL BODY **Y090**
- N° 1 LEFT HAND FINAL BODY **Y090**
- N° 2 RING HOLDERS **TY126** + RUBBER
- N° 2 SHORT SPRINGS **TER009** WITH RUBBER
- N° 2 METAL BANDS **TY042** WITH SCREWS **M8X25**
AND WASHER **8X16**
- N° 2 SPACERS **TY125**
- N° 4 CLIPS **M5**
- N° 4 SMALL ARMID WASHERS
- N° 4 SPACERS **TD079**
- N° 2 SCREWS **M8X20**
- N° 2 SCREWS **M8X16**
- N° 4 SCREWS **M5X12**
- N° 2 WASHERS **8X24**
- N° 2 WASHERS **8X16**
- N° 1 LEFT HEAT SHIELD **TY129**
- N° 1 RIGHT HEAT SHIELD **TY128**

